

A large, light gray watermark logo is centered on the page. It features a semi-circular arc at the top and bottom, with the word "CSMP" in a bold, stylized font across the middle. The "S" and "M" are particularly prominent.

SINGER
211W155

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 211W155

HIGH SPEED, SINGLE NEEDLE, LOCK STITCH, COMPOUND FEED,
FLAT BED MACHINE.

FOR AUTOMOBILE AND FURNITURE UPHOLSTERY, AWNINGS,
TARPAULINS ETC.

THIS MACHINE HAS A VERTICAL AXIS HOOK WITH A RIGID
NEEDLE GUARD ON THE SIDE.

ALTERNATING PRESSER, LINK TAKE-UP, THREAD LUBRICATOR
AND A SAFETY CLUTCH.

List of Parts Complete

for

Machine No. 211M155

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
508251		Arm with 267388
508292		Arm and Bed (bolted and ornamented) 508251, 508253-001, two 204235, four each 200004-805 and 202005,
267152		Arm Cover (side)
350563-805		Arm Cover (side) Screw
508271		Arm Cover Top
267395		Arm Cover Top Gasket (Vellumoid)
200047-819	6	Arm Cover Top Screw
204235	2	Arm Position Pin
200004-805	4	Arm Position Screw
202005	4	Arm Position Screw Washer
267158-002		Arm Shaft
267247-002		Arm Shaft 267158-002 with 200333-803, 200374-830, 200378-803, 200388-803, 267221 and 267222
272142		Arm Shaft Ball Bearing (back) (double shielded bearing)
244747		Arm Shaft Bushing (front)
204329		Arm Shaft Bushing Oil Pad (felt) (lower)
267160		Arm Shaft Bushing Oil Pad (felt) (upper)

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
508337		Arm Shaft Bushing Oil Pad Wick and Lifting Eccentric Oil Wick
200341-803		Arm Shaft Bushing Set Screw
267161		Arm Shaft Connection Belt (reinforced neoprene)
267162		Arm Shaft Connection Belt Pulley with 200363-830, 350492-803 and two 202253
350492-803		Arm Shaft Connection Belt Pulley Position Screw
200363-830		Arm Shaft Connection Belt Pulley Set Screw
202253	2	Arm Shaft Connection Belt Pulley Spring Flange
508253-001		Bed
350440-819		Bed Oil Screw
350366-819	3	Bed Oil Stop Screw
243744	3	Bed Oil Stop Screw Gasket
508331		Bed Oil Supply Tube
508330		Bed Oil Supply Tube 508331 with 267322
267322		Bed Oil Supply Tube Oil Wick
508326-001		Bed Oil Tube Clamp
267276		Bed Oil Tube Clamp Oiling Felt
200034-803		Bed Oil Tube Clamp Screw
202254	5	Bed Oil Wick (No. 1121 Pett 1/4" ϕ x 1-1/4" (long)

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
240003		Bed Slide (back)
223811		Bed Slide (back) Stop
223812		Bed Slide (back) Stop Spring
240004		Bed Slide (front)
203470		Bobbin
233764		Bobbin Case
203648		Bobbin Case Latch
202056		Bobbin Case Latch Pin
203473		Bobbin Case Latch Plunger
203474		Bobbin Case Latch Spring
241674		Bobbin Case Oiling Felt
241675		Bobbin Case Oiling Felt Retainer
350405-803	2	Bobbin Case Oiling Felt Retainer Screw
224004		Bobbin Case Opener
224005		Bobbin Case Opener Lever with 201349, 201542-803 and 203101
201349		Bobbin Case Opener Lever Driving Screw Stud
201542-803		Bobbin Case Opener Lever Driving Screw Stud Nut
203101		Bobbin Case Opener Lever Driving Screw Stud Nut Oil Packing (wick)
265088		Bobbin Case Opener Lever Hinge Stud with 202277
202277		Bobbin Case Opener Lever Hinge Stud Oil Packing (wick)
200364-803		Bobbin Case Opener Lever Hinge Stud Set Screw

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
223623		Bobbin Case Opener Lever Link
200118-804		Bobbin Case Opener Screw
203214		Bobbin Case Tension Spring
200984-803		Bobbin Case Tension Spring Regulating Screw
200594-805		Bobbin Case Tension Spring Screw
203216		Bobbin Case Washer (cloth)
233765		Bobbin Case Complete: Nos. 200594-805, 200984-803, 202056, 203214, 203216, 203473, 203474, 203648, 233764, 241674, 241675 and two 350405-803
244705		Face Plate
200047-804	2	Face Plate Screw
240223		Feed Bar
240224		Feed Bar 240223 with 225837, 267273 and 350197-805
350393-803		Feed Bar Hinge Screw
201518-805		Feed Bar Hinge Screw Nut
264510		Feed Dog
200106-805	2	Feed Dog Screw
268064		Feed Driving Eccentric
268065		Feed Driving Eccentric Adjusting Disc
268066		Feed Driving Eccentric Adjusting Disc Spring
268067		Feed Driving Eccentric Adjusting Disc Spring Collar with two 200382-833
200382-833	2	Feed Driving Eccentric Adjusting Disc Spring Collar Set Screw

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
267031		Feed Driving Eccentric Connection
267032		Feed Driving Eccentric Connection 267031 with 268063 and 270653
267033		Feed Driving Eccentric Connection Friction Washer
200582-819	3	Feed Driving Eccentric Connection Friction Washer Screw
267034		Feed Driving Eccentric Connection Hinge Stud
270653		Feed Driving Eccentric Connection Hinge Stud Needle Bearing
000160-803		Feed Driving Eccentric Connection Hinge Stud Pinch Screw
268063		Feed Driving Eccentric Connection Needle Bearing
508334		Feed Driving Eccentric Connection Oil Tube
508333		Feed Driving Eccentric Connection Oil Tube 508334 with 508335
267293		Feed Driving Eccentric Connection Oil Tube Support
508335		Feed Driving Eccentric Connection Oil Tube Wick
267623		Feed Driving Eccentric Friction Plate
350548-803	2	Feed Driving Eccentric Friction Plate Screw
350477-803	2	Feed Driving Eccentric Friction Plate Screw Set Screw
241763	2	Feed Driving Eccentric Friction Plate Screw Set Screw Packing (brass)
267180		Feed Driving Flange with 267623, two each 241763, 350467-830, 350477-803 and 350548-803

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
350467-830	2	Feed Driving Flange Set Screw
244707		Feed Driving Rock Frame with two 200036-805
200036-805	2	Feed Driving Rock Frame Pinch Screw
508308-001		Feed Driving Rock Shaft
508307		Feed Driving Rock Shaft 508308-001 with 508285 and 508302
508306-001		Feed Driving Rock Shaft 508307 with 201518-805 240224, 244707 and 350393-803
244730	2	Feed Driving Rock Shaft Bushing (back and center)
508320		Feed Driving Rock Shaft Bushing (back) Oil Tube
508319		Feed Driving Rock Shaft Bushing (back) Oil tube 508320 with 267262
267262		Feed Driving Rock Shaft Bushing (back) Oil Tube Wick
508318		Feed Driving Rock Shaft Bushing (center) Oil Tube
508317		Feed Driving Rock Shaft Bushing (center) Oil Tube 508318 with 267411
267411		Feed Driving Rock Shaft Bushing (center) Oil Tube Wick
508304		Feed Driving Rock Shaft Bushing (front)
508301		Feed Driving Rock Shaft Crank
508278		Feed Driving Rock Shaft Crank 508301 with 000160-803, 000458-850 and 500242-803
500242-803		Feed Driving Rock Shaft Crank Pinch Screw

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
000458-850		Feed Driving Rock Shaft Crank Position Screw
202625	2	Feed Driving Rock Shaft Stop Collar with two 200383-803
200383-803	4	Feed Driving Rock Shaft Stop Collar Set Screw
267182		Feed Lifting Eccentric with 201220-833
267273		Feed Lifting Eccentric Fork with 200173-804 and 223655
223655		Feed Lifting Eccentric Fork Oiling Felt
200173-804		Feed Lifting Eccentric Fork Oiling Felt Screw
350197-805		Feed Lifting Eccentric Fork Screw
225837		Feed Lifting Eccentric Fork Screw Washer
201220-833		Feed Lifting Eccentric Set Screw
267245		Feed Regulating Stud
240245		Feed Regulating Stud Retaining Spring
270026		Feed Regulating Stud Spring
508338		Head End Oil Reservoir Felt
240556		Hook (sewing)
240557		Hook 240556 with 203525, 240559, two each 201258-806 and 201409-806
240558		Hook and Bobbin Case Complete: Nos. 233765 and 240557
224019		Hook Bushing (lower) (bronze)
200364-803		Hook Bushing (lower) Set Screw
224020		Hook Bushing (upper) (bronze)

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
200446-803		Hook Bushing (upper) Position Screw
267188		Hook Driving Gear (spiral) with 200382-833 and 201220-833
201220-833		Hook Driving Gear Position Screw
200382-833		Hook Driving Gear Set Screw
240167		Hook Driving Pinion (spiral) with 200382-833 and 201220-833
201220-833		Hook Driving Pinion Position Screw
200382-833		Hook Driving Pinion Set Screw
224022		Hook Driving Pinion Thrust Washer
244712		Hook Driving Shaft
244713		Hook Driving Shaft Ball Bearing (double shielded bearing)
267190		Hook Driving Shaft Ball Bearing Collar with 200382-833 and 201220-833
244714		Hook Driving Shaft Ball Bearing Collar 267190 with 244713
201220-833		Hook Driving Shaft Ball Bearing Collar Position Screw
200382-833		Hook Driving Shaft Ball Bearing Collar Set Screw
267063		Hook Driving Shaft Ball Bearing Retaining Washer
200580-819	3	Hook Driving Shaft Ball Bearing Retaining Washer Screw
244715		Hook Driving Shaft Bearing (left)
508322		Hook Driving Shaft Bearing (left) Oil Tube

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
508321		Hook Driving Shaft Bearing (left) Oil Tube 508322 with 508323
508323		Hook Driving Shaft Bearing (left) Oil Tube Wick
203525		Hook Gib
201253-806	2	Hook Gib Screw
240559		Hook Needle Guard
201409-806	2	Hook Needle Guard Screw
223850		Hook Saddle with 200009-805
224024		Hook Saddle 223850 with 200364-803, 200446-803, 224019 and 224020
240560		Hook Saddle Complete: Nos. 200118-804, 200364-803, 223623, 224004, 224005, 224022, 224024, 240167, 240558 and 265088
244718		Hook Saddle Bearing (right)
508325		Hook Saddle Bearing Oil Tube
508324		Hook Saddle Bearing Oil Tube 508325 with 508332
508332		Hook Saddle Bearing Oil Tube Wick
263093		Hook Saddle Bearing Oil Wick (right) No. 1130 Time 5/32"Ø x 1-5/8" long)
200009-805		Hook Saddle Pinch Screw
200006-805		Hook Saddle Screw
225585		Hook Saddle Screw Washer
508274		Knee Lifter Lifting Lever
508269		Knee Lifter Lifting Lever 508274 with 000225-850 and 508270

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
500279-850		Knee Lifter Lifting Lever Hinge Screw
227561		Knee Lifter Lifting Lever Return Spring
240205-002		Lifting Bell Crank
500280-803		Lifting Bell Crank Cap Screw
508260		Lifting Bell Crank Link
500281		Lifting Bell Crank Link Screw Stud
001664-805		Lifting Bell Crank Link Screw Stud Nut
268064		Lifting Eccentric
508273		Lifting Eccentric Complete: Nos. 268064, 268065, 268066, 268067 and 508254
268065		Lifting Eccentric Adjusting Disc
268066		Lifting Eccentric Adjusting Disc Spring
268067		Lifting Eccentric Adjusting Disc Spring Collar with two 200382-833
200382-833	2	Lifting Eccentric Adjusting Disc Spring Collar Set Screw
508255		Lifting Eccentric Connection
240171		Lifting Eccentric Connection Crank with 200029-805 and 248821
248821		Lifting Eccentric Connection Crank Oil Wick
200029-805		Lifting Eccentric Connection Crank Pinch Screw
508293		Lifting Eccentric Flange
508254		Lifting Eccentric Flange 508293 with 000624-833 267623, 500313-850, two each 241763, 350467-830 350477-803 and 350548-803

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
500313-850		Lifting Eccentric Flange Position Screw
000624-833		Lifting Eccentric Flange Position Screw Set Screw
267623		Lifting Eccentric Friction Plate
350548-803	2	Lifting Eccentric Friction Plate Screw
350477-803	2	Lifting Eccentric Friction Plate Screw Set Screw
241763	2	Lifting Eccentric Friction Plate Screw Set Screw Packing
350467-830	2	Lifting Eccentric Set Screw
240517		Lifting Presser Foot
200074-806		Lifting Presser Foot Screw
508298		Lifting Rock Shaft
508264		Lifting Rock Shaft Complete: Nos. 001664-805, 500281 and 508298
240174	2	Lifting Rock Shaft Bushing
508294		Machine Pulley (aluminum alloy casting for "V" belt)
508257		Machine Pulley 508294 with 141566-803 and 141567-803
508256		Machine Pulley with 272142 and 508257
141566-803		Machine Pulley Position Screw
141567-803		Machine Pulley Set Screw
Cat.3355-22-1		Needle (chrome plated)
240498		Needle Bar with 200175-804, 201350-806 and 240499
202552		Needle Bar Connecting Link

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
267220		Needle Bar Connecting Link Oil Guard
268197		Needle Bar Connecting Link Oil Guard Lock Plate
201313-806	2	Needle Bar Connecting Link Oil Guard Lock Screw
267221		Needle Bar Connecting Link Stud with 267466
200374-830		Needle Bar Connecting Link Stud Set Screw
200388-803		Needle Bar Connecting Link Stud Set Screw
267466		Needle Bar Connecting Link Stud Wick
208552		Needle Bar Connecting Stud with 200086-833 and 202330
200086-833		Needle Bar Connecting Stud Pinch Screw
202330		Needle Bar Connecting Stud Wick
267222		Needle Bar Crank
200378-803		Needle Bar Crank Check Screw
267224		Needle Bar Crank Friction Washer
200333-803		Needle Bar Crank Position Screw
508295		Needle Bar Rock Frame
508259		Needle Bar Rock Frame 508295 with two 267287 and four 200587-804
508258		Needle Bar Rock Frame Complete: Nos. 040025, 267285 and 508259
508339		Needle Bar Rock Frame Oil Felt
508340	3	Needle Bar Rock Frame Oil Felt Cotter Pin
040025		Needle Bar Rock Frame Position Pin

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
267285		Needle Bar Rock Frame Rock Shaft
223693		Needle Bar Rock Frame Rock Shaft Crank Connection with 202277
202277		Needle Bar Rock Frame Rock Shaft Crank Connection Oil Wick
267287	2	Needle Bar Rock Frame Wear Plate
200587-804	4	Needle Bar Rock Frame Wear Plate Screw
267362	2	Needle Bar Rock Shaft Bushing
500243-803		Needle Bar Rock Shaft Connection Hinge Screw
001662-805		Needle Bar Rock Shaft Connection Hinge Screw Nut
508299		Needle Bar Rock Shaft Connection Link Crank
508267		Needle Bar Rock Shaft Connection Link Crank 508299 with 500242-803
508266		Needle Bar Rock Shaft Connection Link Crank Complete: Nos. 001662-805, 223693, 500243-803 and 508267
500242-803		Needle Bar Rock Shaft Connection Link Crank Pinch Screw
508285		Needle Bar Rock Shaft Crank (adjustable)
508302		Needle Bar Rock Shaft Crank (adjustable) Pin
500278-803		Needle Bar Rock Shaft Crank Slide Screw
001662-803		Needle Bar Rock Shaft Crank Slide Screw Lock Nut
500787-803		Needle Bar Rock Shaft Crank Slide Screw Nut
508286		Needle Bar Rock Shaft Crank Slide Screw Spacer

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
240499		Needle Bar Thread Guide
200175-804		Needle Bar Thread Guide Screw
201350-806		Needle Set Screw
208566		Presser Bar with 200074-806
241352-002		Presser Bar Bushing (lower)
207072		Presser Bar Bushing (upper)
200352-833	2	Presser Bar Bushing Set Screw
508309		Presser Bar Lifter
508300		Presser Bar Lifter Bracket
508268		Presser Bar Lifter Bracket 508300 with 051369-803
051369-803		Presser Bar Lifter Bracket Pinch Screw
200653-803		Presser Bar Lifter Hinge Screw
202337		Presser Bar Position Guide
202338		Presser Bar Position Guide Lever with 200086- 833
200086-833		Presser Bar Position Guide Lever Pinch Screw
200352-833		Presser Bar Position Guide Set Screw
508291		Presser Bar Spring (flat)
210949		Presser Bar Spring Bracket with 200086-833
200086-833		Presser Bar Spring Bracket Pinch Screw
350581-803		Presser Bar Spring Regulating Screw
200948-806		Presser Bar Spring Support Screw

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
244759		Safety Clutch Complete: Nos. 244760, 244761, 244763, three each 001266-830, 244762 and 244764
244760		Safety Clutch Belt Pulley with 202253
202253		Safety Clutch Belt Pulley Spring Flange
244764	3	Safety Clutch Driving Ball (7/32 in. diameter)
244762	3	Safety Clutch Driving Ball Spring
244761		Safety Clutch Over Load Pulley with two 140197-830 and three 001258-830
001258-830	3	Safety Clutch Over Load Pulley Adjusting Screw
001266-830	3	Safety Clutch Over Load Pulley Adjusting Screw Lock Screw
244763		Safety Clutch Over Load Pulley Retaining Ring
140197-830	2	Safety Clutch Over Load Pulley Set Screw
241518		Take-up Lever
202399		Take-up Lever Driving Stud with 244071
244071		Take-up Lever Driving Stud Oil Wick
244726		Take-up Lever Guard
201341-803	3	Take-up Lever Guard Screw
267239		Take-up Lever Hinge Stud with 235706
235706		Take-up Lever Hinge Stud Oil Wick
200383-803		Take-up Lever Hinge Stud Set Screw
240023		Tension Bracket with 201224 and 236060

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
244727		Tension Bracket Complete: Nos. 201199, 204271, 223438, 223703, 223704, 223706, 240023, 267315, 267368, 350588-819, two each 200309-805, 201572-819 and 244048
200159-806		Tension Bracket Screw
244048	2	Tension Disc
236060		Tension Disc Position Pin
508270		Tension Release Actuating Spring
000225-850		Tension Release Actuating Spring Screw
508277		Tension Release Bell Crank
000086-850		Tension Release Bell Crank Hinge Screw
508275		Tension Release Bracket
508272		Tension Release Bracket 508275 with 000086-850 and 508277
000175-850	2	Tension Release Bracket Screw
223703		Tension Release Lever
267265		Tension Release Lever Rod
267388		Tension Release Lever Rod Tube
200309-805	2	Tension Release Lever Screw
223704		Tension Release Plunger
204271		Tension Release Washer
223438		Tension Spring
201224		Tension Stud
201572-819	2	Tension Thumb Nut
223706		Thread Controller Disc

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
350588-819		Thread Controller Disc Screw
267368		Thread Controller Spring
267315		Thread Controller Spring Stop
201199		Thread Controller Stud with 204925
200337-803		Thread Controller Stud Set Screw
204925		Thread Controller Stud Washer
267316		Thread Guide
271017		Thread Guide (top of Arm)
201525-805		Thread Guide (top of Arm) Lock Nut
200582-819		Thread Guide Screw
244745		Thread Lubricator Complete: Nos. 001623-819, 201738-819, 201750-819, 244734 to 244743, 244748, 267323, two 244746 and six 201402-819
241765		Thread Lubricator Oil Pad (felt)
263554		Thread Lubricator Oil Pad Holder
244734		Thread Lubricator Oil Pad Holder 263554 with 241765, 244744 and two 200143-819
200143-819	2	Thread Lubricator Oil Pad Holder Screw
244735		Thread Lubricator Oil Reservoir Cover (on Face Plate)
244736		Thread Lubricator Oil Reservoir Cover Gasket (on Face Plate)
201402-819	6	Thread Lubricator Oil Reservoir Cover Screw
244737		Thread Lubricator Oil Socket
001623-819		Thread Lubricator Oil Socket Lock Nut

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
244738		Thread Lubricator Oil Socket Lock Nut Washer
244746	2	Thread Lubricator Oil Socket Oil Seal
244739		Thread Lubricator Oil Socket Plunger
201750-819		Thread Lubricator Oil Socket Plunger Adjusting Nut
244740		Thread Lubricator Oil Socket Plunger Oil Seal (rubber)
244741		Thread Lubricator Oil Socket Plunger Release Lever
267323		Thread Lubricator Oil Socket Plunger Release Lever Pin
244742		Thread Lubricator Oil Socket Plunger Spring
244743		Thread Lubricator Oil Tube
201738-819		Thread Lubricator Oil Tube Nut
244744		Thread Lubricator Plate
200582-819	2	Thread Lubricator Plate Screw
244748		Thread Oil Lubricator Adjusting Nut Retainer
244729		Thread Retainer
240144		Throat Plate
000691-806	2	Throat Plate Screw
020866-997		Trade Mark
228485	2	Trade Mark Drive Screw
508336-055		Variety Plate
228485	2	Variety Plate Drive Screw
240183		Vibrating Presser Bar

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
240184-002		Vibrating Presser Bar Connecting Link
508358		Vibrating Presser Bar Connecting Link Oil Wick
508357		Vibrating Presser Bar Connecting Link Oil Wick Clamp
508261		Vibrating Presser Bar Extension
508297		Vibrating Presser Bar Extension Guide Collar
508262		Vibrating Presser Bar Extension Guide Collar 508297 with 051095-803
051095-803		Vibrating Presser Bar Extension Guide Collar Pinch Screw
508263		Vibrating Presser Bar Extension Spring
202277		Vibrating Presser Bar Wick
240518		Vibrating Presser Foot, 40 needle hole, with 201015-819
201015-819		Vibrating Presser Foot Pinch Screw

ACCESSORIES

for Export

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
200157-819		Attachment Screw
200861-819		Bed Slide Thumb Screw
203470	2	Bobbin
228886		Drip Pan (plastic) Complete Instruction Book
503557		Knee Lifter cpl.
012361	2	Machine Hinge
041400		Machine Rest Pin (wood)
Cat.3355-20-1	3	Needles
Cat.3355-22-1	2	Needles
120342		Oiler (copper plated) with 120343
228476		Screw Driver (bobbin case)
259462		Universal Bobbin Winder cpl.

ACCESSORIES

KNEE LIFTER

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
503557		Knee Lifter Complete: Nos. 006337, 039811, 147175, 150668, 151149, 202784, 228347, 503568, 503570, 503571 and 503574
151149		Knee Lifter Auxiliary Base with three each 140500-813 and wood screws 1 3/4 in. No. 12 F.H.
140500-813	3	Knee Lifter Auxiliary Base Screw
	3	Knee Lifter Auxiliary Wood Screw (1 3/4 in. No. 12 F.H.)
228347		Knee Lifter Lifting Lever Pull Chain
202784		Knee Lifter Lifting Lever Pull Chain Hook
503559		Knee Lifter Rock Shaft (long)
503575		Knee Lifter Rock Shaft (short)
503558		Knee Lifter Rock Shaft Bracket
503574		Knee Lifter Rock Shaft Bracket 503558 with 268072, 503559, 503561, 503567, 503575 and two 503560
503560		Knee Lifter Rock Shaft Catch Ring
503563		Knee Lifter Rock Shaft Knee Arm Hinge Bracket Lever (long)
503562		Knee Lifter Rock Shaft Knee Arm Hinge Bracket Lever (long) 503563 with 500249-813
503565		Knee Lifter Rock Shaft Knee Arm Hinge Bracket Lever (short)
503564		Knee Lifter Rock Shaft Knee Arm Hinge Bracket Lever (short) 503565 with 500249-813

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
500249-813		Knee Lifter Rock Shaft Knee Arm Hinge Bracket Lever (long) Pinch Screw
500249-813		Knee Lifter Rock Shaft Knee Arm Hinge Bracket Lever (short) Pinch Screw
147174		Knee Lifter Rock Shaft Knee Arm Plate
147175		Knee Lifter Rock Shaft Knee Arm Plate 147174 with 147176, 147177 and two 147303
147176		Knee Lifter Rock Shaft Knee Arm Plate Hinge Fork with 000356-803
147177		Knee Lifter Rock Shaft Knee Arm Plate Hinge Fork Hinge Pin
147303	2	Knee Lifter Rock Shaft Knee Arm Plate Hinge Fork Hinge Pin Retaining Clip
000356-803		Knee Lifter Rock Shaft Knee Arm Plate Hinge Fork Set Screw
503570		Knee Lifter Rock Shaft Knee Plate Arm
503569		Knee Lifter Rock Shaft Knee Plate Arm Bracket
503568		Knee Lifter Rock Shaft Knee Plate Arm Bracket 503569 with two 000356-803
000356-803	2	Knee Lifter Rock Shaft Knee Plate Arm Bracket Screw
150668		Knee Lifter Rock Shaft Knee Plate Pad (Rubber)
503561		Knee Lifter Rock Shaft Lever Complete: Nos. 147180, 503562, 503564 and two 503566
147180		Knee Lifter Rock Shaft Lever Link
503566	2	Knee Lifter Rock Shaft Lever Link Hinge Pin
503567		Knee Lifter Rock Shaft Lever Retaining Spring
006337		Knee Lifter Rock Shaft Lifting Bracket with two 000356-803

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
039811		Knee Lifter Rock Shaft Lifting Bracket Extension with 039576
000356-803	2	Knee Lifter Rock Shaft Lifting Bracket Set Screw
039576		Knee Lifter Rock Shaft Lifting Chain Hook
503560		Knee Lifter Rock Shaft Retaining Spring
268072		Knee Lifter Rock Shaft Stop Collar with two 200386-803
200386-803	2	Knee Lifter Rock Shaft Stop Collar Set Screw
503572		Knee Lifter Rock Shaft Support Bracket
503571		Knee Lifter Rock Shaft Support Bracket 503572 with 503573, two each 051208-819, 175184-819 and 500282
503573		Knee Lifter Rock Shaft Support Bracket Adjusting Plate
051208-819	2	Knee Lifter Rock Shaft Support Bracket Adjusting Plate Screw
175184-819	2	Knee Lifter Rock Shaft Support Bracket Adjusting Plate Screw Washer
500282	2	Knee Lifter Rock Shaft Support Bracket Adjusting Plate Wood Screw (5 x 20 DIN 96 St)

ACCESSORIES

UNIVERSAL BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR "V" BELT DRIVE

259428	Bobbin Winder Brake (leather)
259429	Bobbin Winder Brake Clamp

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
200113-806		Bobbin Winder Brake Clamp Screw
225453		Bobbin Winder Frame with 244071 and 259660
225454		Bobbin Winder Frame Hinge Pin
244071		Bobbin Winder Frame Oil Packing (wick)
259660		Bobbin Winder Frame Oil Well Washer
225455		Bobbin Winder Frame Spring
225456		Bobbin Winder Frame Spring Plunger
259930		Bobbin Winder Pulley with 000457-830
000457-830		Bobbin Winder Pulley Set Screw
225381		Bobbin Winder Spindle
225444		Bobbin Winder Stop Latch
200056-805		Bobbin Winder Stop Latch Screw
225458		Bobbin Winder Stop Latch Thumb Lever
225459		Bobbin Winder Stop Latch Thumb Lever Hinge Stud
225459		Bobbin Winder Stop Latch Thumb Lever Joint Stud
202478		Bobbin Winder Stop Latch Trip Lever
200299-819		Bobbin Winder Stop Latch Trip Lever Hinge Screw
225461		Bobbin Winder Tension Bracket with 201499-819
225462		Bobbin Winder Tension Bracket Complete: Nos. 013710, 201572-819, 225461 and two 002102
259662		Bobbin Winder and Tension Bracket Base

<u>No.</u>	<u>Amt.</u>	<u>Name</u>
200082-804		Bobbin Winder Tension Bracket Screw
228026		Bobbin Winder Tension Bracket Screw Washer
002102	2	Bobbin Winder Tension Disc
013710		Bobbin Winder Tension Spring
201499-819		Bobbin Winder Tension Stud
201572-819		Bobbin Winder Tension Stud Thumb Nut
259462		Universal Bobbin Winder Complete: Nos. 200056-805, 200082-804, 200113-806, 200299-819, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259662, 259930, two each 225459 and Wood Screws 3/4 in. No. 12 R.H.B.

